
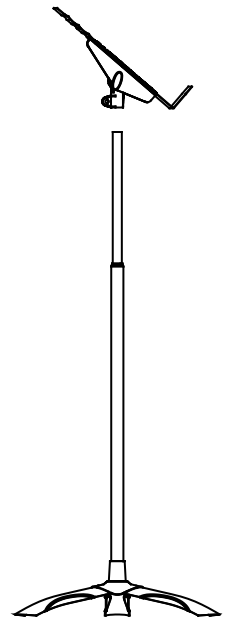


# STRUKTURE<sup>®</sup>

## STANDS


### List of Parts:

Part No.	Part name	Q' ty
A	Tripod Legs	1
B	Shaft with Extension Tube	1
C	Music Desk	1
D	Tapered Ring	1
E	Hexagonal Screw Bolt	1
F	Hexagonal Hand Tool	1
G	5mm Allen Wrench	1

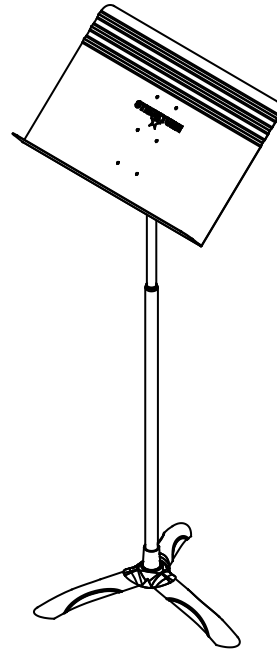


### Instructions:

1. place tripod legs (A) between shaft (B) and tapered ring (D). Use hand tool (F) to secure pieces together with hexagonal bolt (E)
2. Adjust height of silver tube inside shaft (B), and secure the music desk (C) to the top.

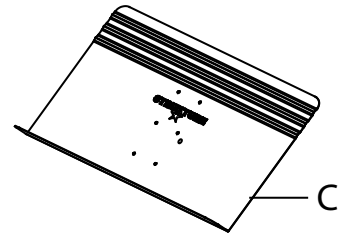

### Adjusting The Friction Clutch:

It is recommended to adjust the clutch before assembly, Use 5mm Allen wrench (G) with the hexagonal screw inside shaft (B), to adjust friction clutch to desired tension. Do not permit inner silver tube to turn

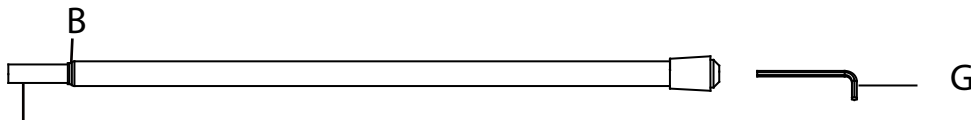

Hold inner silver tube while adjusting tension

